 
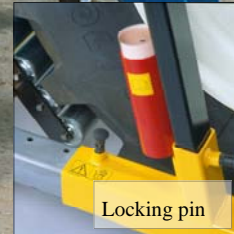 


Liberator[®] wheel lifter

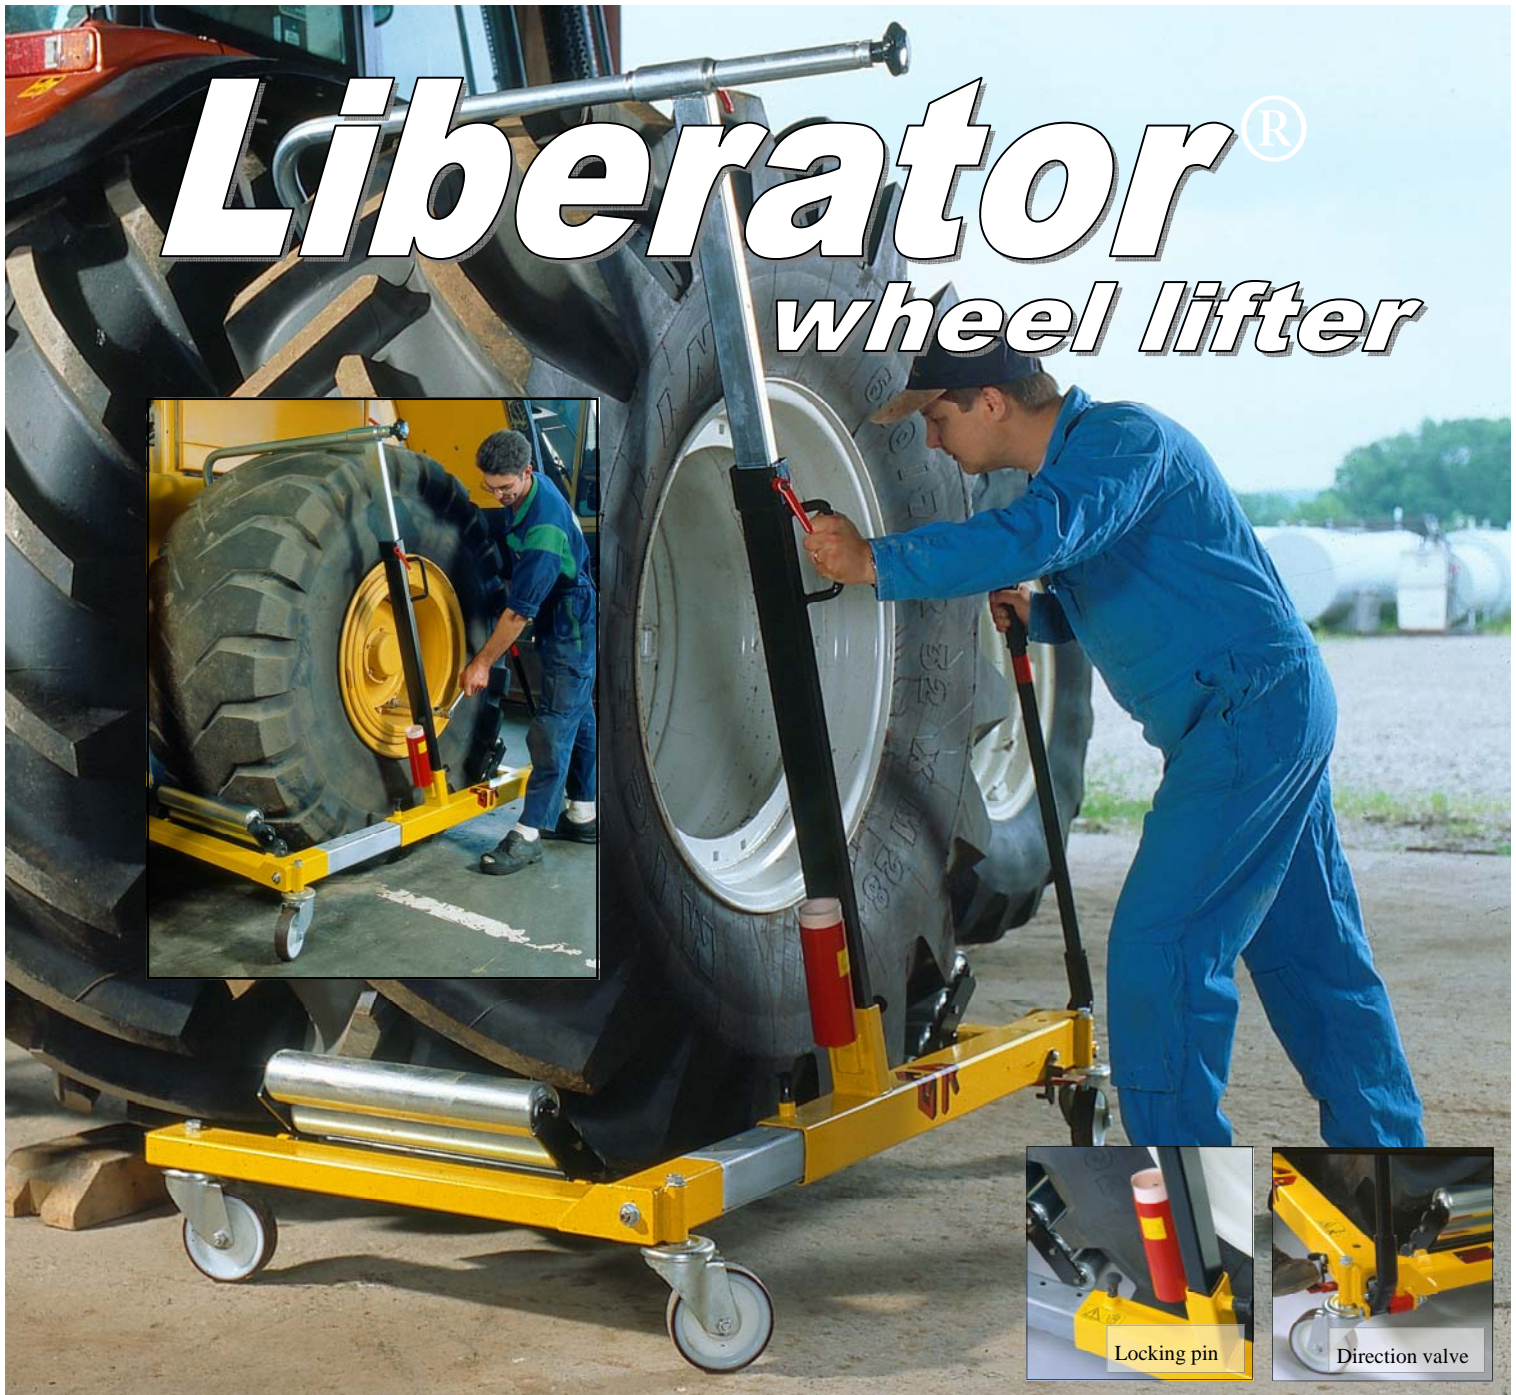


The Liberator wheel lifter liberates the fitters from arduous and risky working tasks, such as heavy lifts, and the wheel change is made rapidly, safely and comfortable. The wheel lifter is intended for transportation, mounting and demounting of coarse tread pattern tyres on tractors, earth moving machines, dumpers etc. An investment in a Liberator wheel lifter is paid off within a short period as the work to change big tyres is made in a fraction of the time used for conventional tyre change.

In order to optimize flexibility and performance the machine has got a telescopic ram. This is pumped together when a wheel shall be lifted, whereby the eight support rollers are pressed in under the wheel and raises it. Due to this lifting principle the Liberator is adapted for the actual wheel dimensions. Thus the same machine can be used for various wheel dimensions, independant of the shape of the rim or hub. The working method also means that the overall size is decreasing when a small wheel is handled, so the machine is never unnecessarily unwieldy.

The wheel support is diagonal in order to give good access for loosening the wheel nuts. In order to facilitate transportation between various work sites the wheelsupport and the pump lever can be removed without use of tools.

Max load	1200 kg	Weight	112 kg
Max wheel diameter	2200 mm	Width	1260 mm
Min wheel diameter	1100 mm	Depth	1010 mm
Max tyre width	800 mm	Wheels	150x40mm

Subject to change without prior notice

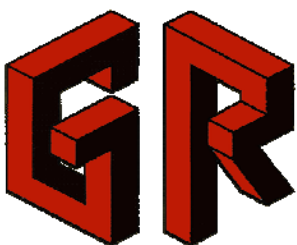

Gothia Redskap
S -590 33 Fornåsa Sweden

Tel. +46 -13 393200 Fax. +46 -13 393272
gothia@gothiaredskap.se